

XENON™

Body Styling Kits! • Sport Flares

UTG™

Innovative Plastic Accessories

Mustang NEW PRODUCTS CATALOG



2010 Mustang Air Dam Kit #12830
(V-6 Models Only)



2010 Mustang GT Air Dam #12951



2010 Mustang Rear
Spat Kit # 12840 (V6 Only)



2010 Mustang Rear 3 Pc Spoiler # 12835



2010 Mustang GTS Head Light Covers GT0251S

May 2010

Quality begins with great design...



**2010 Mustang Rear
Body Scoop Kit # 12810**



**2005-10 Mustang GTS
Solarwing # 51241**

**2010 Mustang Quarter
Window Scoop Kit #12760**



**2010 Mustang GTS Rear Panel-GT4154
2010 Mustang GTS Rear Tail Light Covers GT4151**



**2005-09 Mustang
Front Fender
Scoop Kit # 12790**



**2010 Mustang Front
Fender Scoop Kit
12820**



**2005-10 Mustang
Hood Scoop # 12138**



**2005-2010 GTS Louvered Quarter
Window Covers, Smoke #GT4812S**




1999-04 Mustang Hood Scoop # 12701



1994-98 Mustang Hood Scoop #12731



1994-98 Mustang Quarter Window Scoop Kit # 12740

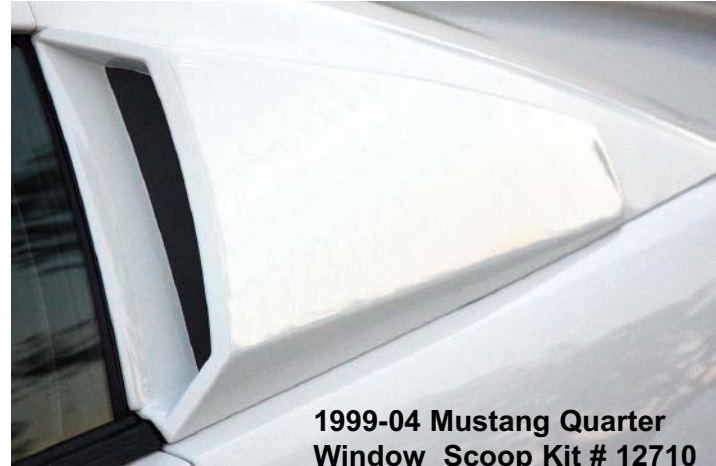

1999-04 Mustang Quarter Window Scoop Kit # 12710



1999-04 Mustang Front Body Scoop Kit # 12800



1994-98 Mustang Body Scoop Kit # 12750



1999-04 Mustang Body Scoop Kit # 12720



2010 Mustang GTS Fog Light Covers GT0251FS



Air Dam Kit (V-6 Models Only) #12830



2005-09 Mustang GTS Third Brake Light Cover GT4142BLS



2005-09 Mustang GTS Turn Signal Covers GT0243TSS



2005-09 Mustang V6 Pony Package GTS Fog Light Covers GT0242FS



1987 Mustan GT Factory Style Rear 3 Pc Valance #12860



1987-93 Mustang LX Factory Style Rear Fascia # 12854

Xenon

Part No.	Description
2010 Mustang	
12951	Front Air Dam, (GT Only)
12830	Air Dam Kit (V-6 Models Only)
12760	Quarter Window Scoop Kit (Exc Convertible)
12138	Hood Scoop
12810	Rear Body Scoop Kit
12820	Front Fender Scoop Kit
12840	Rear Body Spat Kit (V-6 Models Only)
12835	Rear Spoiler, 3 Piece
2005-2009 Mustang	
12790	Front Fender Scoop Kit
1999-2004 Mustang	
12701	Hood Scoop
12710	Quarter Window Scoop Kit
12720	Rear Body Scoop Kit
12800	Front Fender Scoop Kit
1994-1998 Mustang	
12731	Hood Scoop
12740	Quarter Window Scoop
12750	Rear Body Scoop Kit
1987-1993 Mustang LX	
12854	Factory Style "LX" Rear Fascia
12860	Factory Style "GT" Rear 3 Pc Valance Kit

GTS

Part No.	Description
2010 Mustang	
GT0251S	Head Light Covers, Smoke
GT0251C	Head Light Covers, Clear
GT0251X	Head Light Covers, Carbon Fiber Pattern
GT0251FS	Fog Light Covers, Smoke
GT0251X	Fog Light Covers, Carbon Fiber Pattern
GT4151	Tail Light Cover, Smoke
GT4151X	Tail Light Cover, Carbon Fiber Pattern
GT4154	Rear Center Blackout Panel, Smoke
GT4154X	Rear Center Blackout Panel, Carbon Fiber
GT4812S	Louvered Quarter Window Covers, Smoke
51241	Solarwing II, Smoke
2005-2009 Mustang	
GT0242FS	Fog Light Covers, V6, Smoke
GT0242FX	Fog Light Covers, V6, Carbon Fiber Patt.
GT4812S	Louvered Quarter Window Covers, Smoke
GT0243TSS	Front Turn Signal Covers, Smoke
GT0242TSX	Front Turn Signal Covers, Carbon Fiber
GT4142BLS	Rear Third Brake Light Cover, Smoke
GT4142BLX	Rear Third Brake Light Cover, Carbon Fiber
51241	Solarwing II, Smoke

Note: All Xenon kit part numbers are available as seperate components.

Distributed By:



2891 East Via Martens • Anaheim, Ca 92806-1751 • (800) 999-8753 • (714) 632-1709 • Fax (714) 632-2738

International Phone 01-714-632-1709 • Fax 01-714-632-2738

www.teamxenon.com

