


## **Part No. 12910 (12912, 13)** **Quarter Window Scoops** **2010-12 Camaro (all models)**

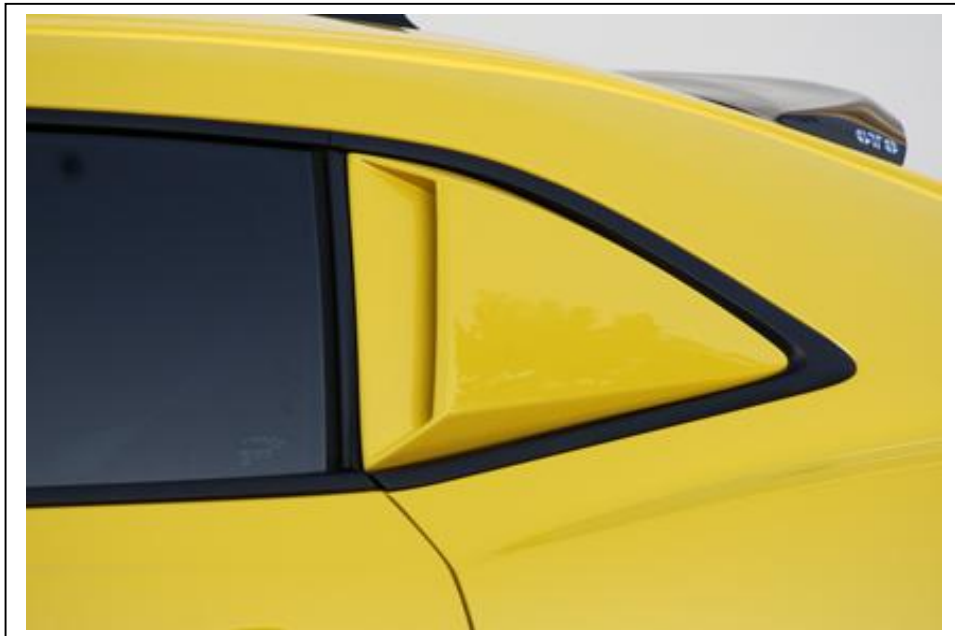

We have provided complete instructions and hardware; the list of these items is listed on page 3 of the instructions.

- Before starting please verify that the instructions and hardware are included with the shipment. Also, verify that you received the correct part(s). All part numbers are embossed on the inside of the urethane component(s).

Tools and general materials required: Acetone or MEK, Burgundy Scotchbrite pad, cleaning cloths

### **THERE ARE FOUR PHASES TO MOST INSTALLATIONS:**

1. Removal of factory parts and then **TEST FIT** the aftermarket product
2. Preparation of the parts for paint and painting
3. Installation of the adhesive tape
4. Installation of the part

### **PHASE 1) REMOVAL & TEST FIT**

- **REMOVAL:** Nothing needs to be removed from the vehicle
- **TEST FIT** the parts to verify excellent fit

**DO NOT PREP, DRILL, OR PAINT THE PARTS UNTIL TEST FITTING IS COMPLETE. IMPORTANT NOTE: BE AWARE THAT THE INSTALLATION OF THESE WINDOW SCOOPS MAY LIMIT YOUR FIELD OF VISION TO THE LEFT AND RIGHT SIDE**

**Note: Be aware that these parts will reduce your vision out the side of the vehicle.**

**NOTE:**

Urethane parts might seem to be slightly distorted upon test fit. If so, place them in the sun topside up (if a warm day) or in a warm area, with a support underneath the part that allows all four edges to hang over by 2", approximately 70-80 degrees F, for 2-3 hours and it will return to its original shape and become more flexible.

**PHASE 2) PREPARATION OF URETHANE PART (S) FOR PAINTING:**

**This process is following an approved Sherwin Williams procedure and materials. Consult your paint supplier for equivalent materials and / or procedures.**

- **WASH** the paintable surfaces with a heavy duty detergent degreaser i.e....Castrol purple stuff, Palmolive liquid dish soap, red hot, and USP90 scuff gel, using a gray scuff pad until the part is dull and then rinse thoroughly.
- **SAND** across item with 400 grit or finer paper and check for imperfections. Repair as needed.
- **RE-WASH** with heavy detergent degreaser and USP90 scuff gel or Palmolive liquid dish soap using gray scuff pad to remove any residue. Rinse thoroughly and wipe dry with a lint free towel.
- **WIPE** item down using SC159 plastic and anti-static cleaner with lint free towel.
- **SPRAY** item with UPO7227 plastic adhesion promoter.
- **SPRAY** item with P30 sealer base coat then clear coat.
- **DO NOT oven bake our parts above 100 degrees F.** They should be well supported during any heat cycle to avoid the flexible part from warping.



**Figure #1**

**PHASE 3) INSTALLATION OF THE ADHESIVE TAPE AND VINYL INSERT(perform in a warm area above70 Degrees)**

- **ON THIS PART, THERE SHOULD BE 2 STRIPS OF TAPE INSTALLED ON THE INSIDE LEADING (FORWARD) EDGE OF THE PART, while the balance of the part edges inside will have one strip of tape installed. (Figure 1)**
- **REMOVE 1/2"** masking tape from the backside of the part.
- **Looking at Figure #1 you can see that area where the tape is to be installed has 2 rows of 1/2" x .60 tape installed next to each other on each end and a single row of tape in the top and bottom tape ledge area.**
- **REMOVE any paint over spray on the tape area of the part with acetone and if needed use 3M #7447 Scotchbrite burgundy pad. After paint over spray is removed wipe tape ledge with a clean rag and acetone.**
- **CLEAN the tape ledge on the inside of the part with MEK or Acetone.**
- **ROUGH up the tape ledge using 3M burgundy Scotchbrite pad that has been dipped in MEK or Acetone and then wipe clean with the MEK or Acetone.**
- **APPLY the provided 3M adhesion promoter, #4298, onto the part and PRESS the tape on with the handle part of scissors.**
- **ALLOW the part to set with the tape applied for about 30 minutes – this will help the curing process, before installing the product on vehicle.**
- **MAKE SURE that the front part of the scoop is clean where the vinyl inserts will adhere to.**
- **INSTALL the black vinyl inserts on the parts.**

**PHASE 4: INSTALLATION OF THE PART (Perform in a warm area of 70 degrees)**

- **The part needs to be warm which will increase it's flexibility and the ease of installation**
- **SET the painted part with the tape installed bottom side down on a 2 x 4 or something that will allow all four edges to hang over this support by at least 2 inches. Place the part in the sun on a warm day or in a very warm area for at least one hour. This will allow the part to become more pliable and flexible.**
- **CLEAN the area which the tape will contact the vehicle with acetone or MEK.**
- **REMOVE the red tape backing from the INSIDE foward row of tape.**
- **PULL all the ends of the outside rows of the tape red back liner outside the edge of the part so you can pull them when the part is in place.**
- **SET the part in place and slowly pull the red liner from the outer rows of tape and press the part snuggly into position**

**PART NUMBER (S):**

**Kit #12910 (Consists of 12912 and 12913 parts)  
Quarter Window Scoops**

**HARDWARE PROVIDED:**

**(2) - 3M4298 adhesive packs, 16-Feet, 1/2" x .060 tape, (1) each, left and right scoop black vinyl inserts, (1) set of instructions**

**DATE:**

**December 9, 2009, Rev. May 31, 2012**

**AMERICAN BEST CAR PARTS**

**XENON**

**2891 VIA MARTENS**

**ANAHEIM CA 92806**

**714-632-1709 Phone, [www.teamxenon.com](http://www.teamxenon.com)**

File: S:\Doc\Instruction Sheets\Xenon\Ford\Mustang

12910 Camaro 2010-12 window scoops instructions