

Kit #13030 (13032, 33)
Rear Body Scoops (pr)
2009-12 Nissan 370Z



PLEASE READ INSTRUCTIONS THOROUGHLY BEFORE PROCEEDING

We have provided complete instructions and hardware; the list of these items is listed on page 3 of the instructions.

- Before starting **please verify** that the instructions and hardware are included with the shipment. Also, **verify** that you received the correct part(s). All part numbers are embossed on the inside of the urethane component(s).
- General materials required: Acetone or MEK, Burgundy Scotch Brite pad, cleaning cloths

THERE ARE FOUR PHASES TO MOST INSTALLATIONS:

1. Removal of factory parts and then **TEST FIT** the aftermarket product
2. Preparation of the parts for paint and painting
3. Installation of the adhesive tape
4. Installation of the part

PHASE 1) REMOVAL & TEST FIT

REMOVAL: Nothing needs to be removed from the car

- **TEST FIT** the parts to verify excellent fit

DO NOT PREP, DRILL, OR PAINT THE PARTS UNTIL TEST FITTING IS COMPLETE!

NOTE:

Urethane parts might seem to be slightly distorted upon test fit. If so, place them in the sun topside down (if a warm day) or in a warm area, approximately 70-80 degrees F, for 2-3 hours and it will return to its original shape and become more flexible.

PHASE 2) PREPARATION OF URETHANE PART (S) FOR PAINTING:

This process is following an approved Sherwin Williams procedure and materials. Consult your paint supplier for equivalent materials and /or procedures.

-
- **WASH** the paintable surfaces with a heavy duty detergent degreaser i.e....Castrol purple stuff, Palmolive liquid dish soap, red hot, and USP90 scuff gel, using a gray scuff pad until the part is dull and then rinse thoroughly.
 - **SAND** across item with 400 grit or finer paper and check for imperfections. Repair as needed.
 - **RE-WASH** with heavy detergent degreaser and USP90 scuff gel or Palmolive liquid dish soap using gray scuff pad to remove any residue. Rinse thoroughly and wipe dry with a lint free towel.
 - **WIPE** item down using SC159 plastic and anti-static cleaner with lint free towel.
 - **APPLY** masking tape onto the backside of the part in the tape ledge areas (see Figure #1) so that no paint adheres to the tape ledge.
 - **SPRAY** item with UPO7227 plastic adhesion promoter.
 - **SPRAY** item with P30 sealer base coat then clear coat.
 - **DO NOT** oven bake our parts above **100 degrees F**. They should be well supported during any heat cycle to avoid the flexible part from warping.


Figure #1
#1



PHASE 3) INSTALLATION OF THE ADHESIVE TAPE (perform in a warm area above 70 Degrees)

- REMOVE 1/2" masking tape from the backside of the part.
- Looking at Figure #1 you can see that the front area where the tape is to be installed has 2 rows of 1/2" x .60 tape installed next to each other. The other sides of the underside of the scoop have one row of adhesive tape applied onto the tape ledge area.
- REMOVE any paint over spray on the tape area of the part with acetone and if needed use 3M #7447 Scotch Brite burgundy pad. After any paint over spray is removed wipe tape ledge with a clean rag and acetone.
- CLEAN the tape ledge on the inside of the part with MEK or Acetone.
- ROUGH up the tape ledge using 3M burgundy Scotch Brite pad that has been dipped in MEK or Acetone and then wipe clean with the MEK or Acetone.
- APPLY the provided 3M adhesion promoter, 3M#4298, onto the part where the tape will be installed and PRESS the tape on with the handle part of scissors.
- ALLOW the part to set with the tape applied for about 30 minutes – this will help the curing process, before installing the product on the vehicle.

Figure #2

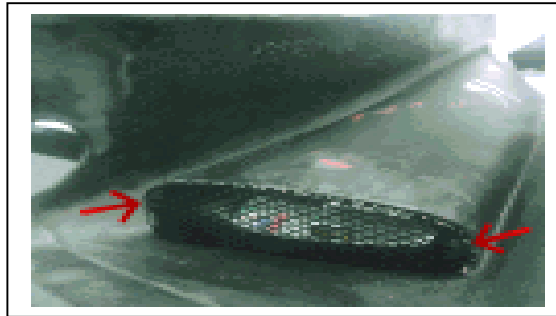

PHASE 4: INSTALLATION OF THE PART (Perform in a warm area of 70 degrees)

See Figure #2. We have provided 2 black aluminum screens and 2- #8 x 1/2" screws for installation onto the inside of each body scoop if you choose. Set the 5 x 1 3/4" screen in place behind (inside) the part opening, mark to trim and then trim to fit. Set the trimmed screen in place, predrill the two screw locations with a 7/64" drill bit and secure the screen with the provided screws.

- The part needs to be warm which will increase its flexibility and the ease of installation
- The location of this body scoop is shown in the picture on Page 1.
- CLEAN the area which the tape will contact the body with acetone or MEK.
- REMOVE the red tape backing from the INSIDE row of tape installed on the front side.
- PULL all the ends of the outside rows of the tape red back liner outside the edge of the part so you can pull them when the part is in place.
- SET the part in place and slowly pull the red liner from the outer rows of tape and press the part snugly into position.
- Do not wash or expose the installed parts to water for 24 hours.

PART NUMBER(S): Kit #13030 (13032, 13033) Rear Body Scoops

HARDWARE PROVIDED:

(2) - 3M4298 adhesive packs, (12)- Feet, 1/2" x .060 tape, (1)- set instructions, (2)- Aluminum black mesh, 5" x 1 3/4", (2)- #8 x 1/2" non self-tapping screws

DATE:

Revised: April 7, 2011

AMERICAN BEST CAR PARTS
2891 Via Martens, Anaheim, CA 92806
714-632-1709

File: Shared/ instructions
13030 Instructions, Nissan Folder